


## Use bins with spring loaded inserts to maintain constant work height

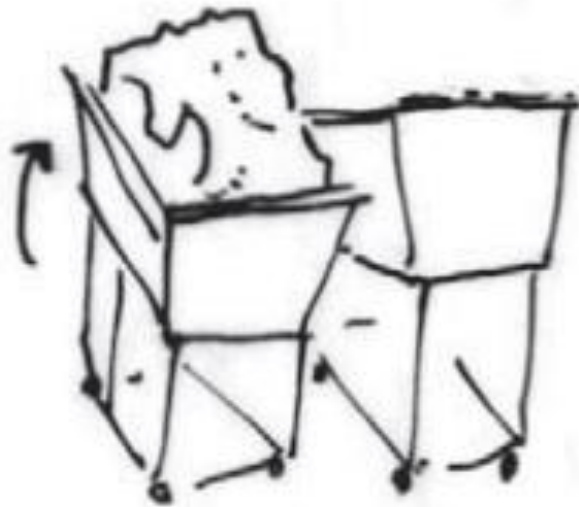

Content from the MSD Prevention Guideline for Ontario, Book 3A (2007).